

Parts Included:





Revolutionary Retina Lock™ Alignment Technology –

Provides instant feedback that will identify even the slightest torque or anchor point change



INSTRUCTIONS



Center the dot for a perfect shot!

Step 2: Top Pin Adjustment

Set your top pin to your preferred position in the bezel using the hex key provided. (we recommend in the top 1/3 of the bezel)

With both the windage and elevation Tool-Free locking knobs loosened, use the micro



adjustments to sight in your first pin at your preferred distance (we recommend 20 yards), then tighten the Tool-Free locking knobs.



Retina Lock™ Adjustment

a) If you see the green Retina Lock™, adjust the green Retina Lock™ until the black dot is centered within the green Retina Lock™ using the micro adjustments located on the top and top side of sight. Remember you are adjusting the green Retina Lock™ to fit your form/anchor point. Repeat this step until the black dot is centered in the green Retina Lock™ — at your form/anchor point.

Left & Right

Up & Down





Optional Features:

center the black dot in the green Retina

centered in the green Retina Lock™

to sight in the rest of your pins!

Lock™ at your form/anchor point. Repeat

process as needed. Once your black dot is

AT YOUR FORM/ANCHOR POINT it's time

Adjustable 2nd Axis used for leveling

sight. This
adjustment
allows you to
adjust your
sight level
while holding
your bow at
your natural
cant. To adjust,



loosen screws and adjust to your desired position. Tighten screws.

STOP!!!! DO NOT ADJUST ANY OF THE RETINA MICRO ADJUSTMENTS!!!

IQ PRO XT Bowsight™ set up instructions:

Step 1: Mounting Sight To Bow

Mount the mounting bracket onto your bow with the bow mounting screws provided.

Slide the sight extension dovetail into the mounting

bracket. Choose which detent in the extension best fits you, and tighten the mounting bracket screw to secure the sight

mounting bracket screw to secure the sight in place.



Before beginning Step 3 make sure your top pin is sighted in.

Step 3: Retina Lock™ Adjustment

Once your top pin is accurately sighted in — it's time to adjust your Retina Lock™. Draw your bow using the same form/anchor point used to set your top pin and look for the green Retina Lock™.



b) If you don't see the green Retina Lock™ at your form/anchor point you will need to move your anchor point up or down and possibly left or right until you find the green Retina Lock™. Once you've determined the direction of the areen Retina Lock™, use the micro adjustments located on the top and top side of sight to adjust the green Retina Lock™ to fit your form/anchor point. The micro adjustment on the top of the sight is to move the green Retina Lock™ up and down and the micro adjustment on the top side of sight is to move the green Retina Lock™ left and right - REMEMBER YOU ARE MOVING THE GREEN Retina Lock™. Repeat this step until the black dot is centered in the green Retina Lock™ – at your form/

HOW TO ADJUST:

anchor point.

If the green Retina Lock™ is high and to the right, you will need to move the adjustment low and to the left to try and

Tool-Free locking knobs which can be removed and replaced with included screws if desired.



For a quick video on how to set up your IQ PRO XT Bowsight™ please visit:

iqbowsights.com