

SCENT CRUSHER®

HALO SERIES

Covert Closet – Instructions

 
Armoire secrète – Instructions

Mesh Bag
Included

Sac en filet
Inclus



Number	Parts	QTY
1		1
2		2
3		2



The wall outlet/car adapter can be used to power the Halo Generator.

L'adaptateur de prise murale / voiture peut être utilisé pour alimenter le Halo Générateur.

Customer Service Line: 1-877-575-3173
Two Year Limited Warranty
www.scentcrusher.com

NEED HELP? Please contact our Customer Service Line BEFORE returning item to the store.

Numéro de téléphone du service à la clientèle : 1-877-575-3173
Garantie limitée de deux ans

BESOIN D'AIDE? AVANT de retourner un article au magasin, veuillez communiquer avec notre service à la clientèle.

A division of MoJack.

Customer Service
1-877-575-3173



Step 1 Insert the white, flexible pole into the inside zipper pocket. Repeat on opposite side.

Insérez le pôle flexible blanc dans la poche intérieure de la fermeture éclair. Répétez sur le côté opposé.

Step 2 Snap the metal pole into the socket as shown. Repeat on opposite side.

Enclenchez le poteau métallique dans la prise comme illustré. Répétez sur le côté opposé.



Step 3 Snap the top, u-shaped metal pole into the two vertical poles. Pull the Covert Closet cover up and over the frame as shown.

Enclenchez le poteau métallique supérieur en forme de U en deux poteaux verticaux. Tirez le Couverture secrète du placard le cadre comme indiqué.



The Halo Generator can be housed in the pouch located on the side of the bag or hung from the closet framing when the closet assembly is used.

Le générateur Halo peut être logé dans la pochette située sur le côté du sac ou accroché au cadre du placard lorsque le placard est utilisé.

CAUTION! Read the Ozone Machine Instruction Manual and the warning label tags before operation.
MISE EN GARDE! Avant utilisation, lire le manuel d'instructions de l'ozoniseur et les étiquettes d'avertissement.

SCENT CRUSHER®

HALO SERIES

Ozone Generator - Instruction Manual

CAUTION: Read manual carefully for proper procedures and operation.

Caution using rubbers and elastics with ozone.
NOT RECOMMENDED FOR IN-FIELD USE.

USING THE OZONE GENERATOR


- 1) Press and hold the ON/OFF button for two seconds to turn Ozone Generator ON or OFF.
- 2) Using the POWER button, select the amount of time you wish to run the unit (10, 20, 30 or 60 minutes).

NOTE: If no time is selected after 10 seconds, the unit automatically shuts off.

CHARGING THE OZONE GENERATOR

Insert power cord into the outlet reading “IN DC 12V-24V” on the back of the unit. The charging indicators are as follows:

No Display	0% Charged
One Light	25% - 50% Charged
Two Lights	50% - 75% Charged
Three Lights	75% - 100% Charged
Four Lights	100% Charged

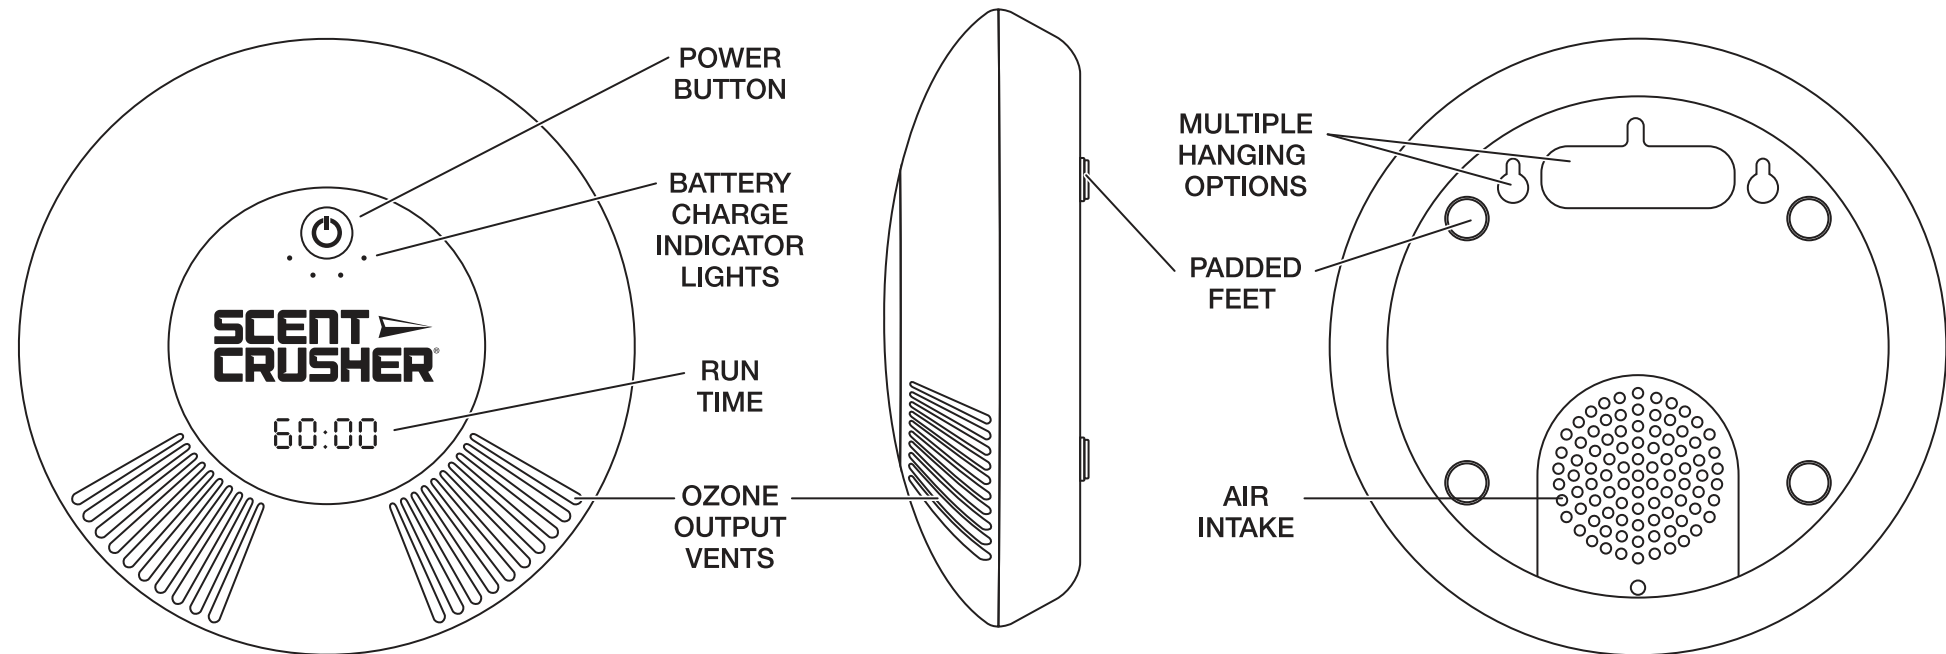 

2 YEAR LIMITED WARRANTY

Warranty is void if machine is mistreated or disassembled
Customer Service Line: 1-877-575-3173

Model:	Ozone Generator
Input Vol:	AC 110v / 60Hz – DC 12V
USB Output:	5V
Maximum Ozone Output:	500 mg/h
Battery Voltage:	7.4V

INCLUDED

- One (1) Wall Outlet Adapter
- One (1) Car Outlet Adapter

MoJack warrants the product for two years against failure due to defect in material or workmanship when product is used properly. MoJack will replace any defective part at no cost. This warranty does not cover any product that has been altered or adjusted, or any product that has been misused or abused. THIS IS THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDY. MOJACK DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. MOJACK SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF THE IMPLIED WARRANTIES OR THE REMEDIES FOR BREACH OF THE IMPLIED WARRANTIES, SO THESE EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

What does this warranty cover?

This warranty covers against a failure due to a defect in material or workmanship within two years of original retail purchase.

What does this warranty NOT cover?

This warranty does not cover any product which has been altered or adjusted in any way from its original model. It will not cover any product which has been damaged due to misuse, abuse, accident or negligence. This warranty does not cover incidental or consequential damages. This warranty does not apply to product purchased used or from an unauthorized seller.

What will be done to correct problems?

We will replace any defective part (within the coverage period) at no charge.

How do I contact someone about a warranty issue?

You can contact our toll-free number 1-877-575-3173 or use our website at scentcrusher.com. In order to be eligible for this warranty you must keep your receipt as proof of date of sale.

What is the return policy?

Please refer to the Return Policy and Procedures of your place of purchase for returns and refunds.

WARNING AND SAFETY INSTRUCTIONS

- USE ONLY FOR INTENDED PURPOSES.
- NOT INTENDED FOR IN-FIELD USE.
- READ AND UNDERSTAND ALL SAFETY WARNINGS BEFORE USING THE OZONE MACHINE.
- USE IN WELL VENTILATED AREA.
- KEEP AWAY FROM CHILDREN AND PETS DURING USE.
- KEEP OZONE MACHINE DRY.
- AVOID USE IN EXTREMELY HIGH TEMPERATURE OR HIGH HUMIDITY. HIGH TEMPERATURE AND/OR HUMIDITY WILL GREATLY REDUCE THE EFFECTIVENESS OF THE UNIT.
- DO NOT DISMANTLE OR TAMPER WITH THE EQUIPMENT.
- DO NOT BLOCK THE AIR INTAKE AS IT WILL AFFECT THE AIR VENTILATION.

A division of  MoJack®

NEED HELP? Please contact our customer service BEFORE returning to the store. For help with assembly, or if you are missing a part, please call our Customer Service Department.

Customer Service
1-877-575-3173

3535 N. Rock Road | Wichita, KS 67226 | 1-877-575-3173 | scentcrusher.com