

INSTRUCTIONS



Step 2: Zeroing Block Adjustment

Move the IQ PRO ONE pin to the desired location by turning the green knob located at the bottom of the sight. Use the windage and elevation adjustments to sight in the pin at your preferred distance. Slide the zeroing block into position against the pin by loosening the block set screw, and tightening it when the correct position has been reached.



Retina Lock[™]Adjustment

 a) If you see the green Retina Lock[™] adjust the green Retina Lock™ until the black dot is centered within the green Retina Lock™ using the micro adjustments located on the top and side of sight. Remember you are adjusting the green Retina Lock™ to fit your form/anchor point. Repeat this step until the black dot is centered in the green Retina Lock™ - at your form/anchor point.



b) If you don't see the green Retina Lock™

at your form/anchor point you will need to

move your anchor point up or down and

possibly left or right until you find the

green Retina Lock™. Once you've

center the black dot in the green Retina Lock[™] at your form/anchor point. Repeat process as needed. Once your black dot is centered in the green Retina Lock™ AT YOUR FORM/ANCHOR POINT you can now sight your pin in at other distances and make your distance marks.

Additional Features:

2nd and 3rd Axis Adjustments

Sight leveling adjustments allows you to level your sight

according to your shooting style. To adjust. loosen screws and adjust to your desired position. Tighten screws.



The IQ PRO ONE comes with two markable sight tapes. One sight tape is located on the side of the sight, and the other is located inside the bezel allowing the shooter to check his/her vardage as they are shooting.



For a quick video on how to set up your IQ PRO ONE Bowsight™ please visit:

iqbowsights.com

Step 3: Retina Lock[™] Adjustment

Set up instructions:

Step 1: Mounting Sight To Bow Mount the sight onto your bow with

the bow mounting screws provided.





Once your top pin is accurately sighted in it's time to adjust your Retina Lock[™]. Draw your bow using the same form/anchor point used to set your top pin and look for the green Retina Lock™.



HOW TO ADJUST:

If the green Retina Lock™ is high and to the right, you will need to move the adjustment low and to the left to try and

