



Quick Start Guide

Covert WC30-A LTE Wireless Camera

1. Insert batteries, SD card, and SIM card into your WC30-A.
2. Switch the camera to SETUP and find the Registration menu screen.
3. Using your cell phone camera, scan the QR code and follow the link to secure.covert-wireless.com
4. Either Login or create a new account.
5. Once logged in, you will see the IMEI and ICCID populated in the appropriate fields.
6. Choose which AT&T plan you would like the camera added to, and click activate

Downloading the Mobile App:

Search "**Covert Wireless**" in your Google Play Store or Apple App Store. Be sure to turn on notifications in your phone settings.



Accessing the Web Portal:

Open your web browser to:

www.covert-wireless.com

Note: You may cancel your monthly plan anytime by calling 270-743-1515, emailing support@dlccovert.com, or logging into your secure.covert-wireless.com account.