

Using the Synapse

Depress the *Reset, then close the jaw around the D-Loop. Pull with slight tension against the D-Loop to ensure the jaw is locked prior to use.

Independent Tension and Travel Adjustments

Tension: Rotate clockwise to increase, counterclockwise to decrease.

Travel: Rotate clockwise to decrease, counterclockwise to increase.

-It is possible to set the tension too light. Adjust in small increments

Interchangeable 3rd/4th finger (figure 1)


Easily converts from a 3-finger release to a 4-finger release

Sweeping 4th finger (figure 2)

Conforms to the archer's style and comfort by offering the ability to adjust the sweep angle of the 4th finger attachment up to 45 degrees

Infinite position thumb post

Allows the archer to customize the thumb post to optimal position

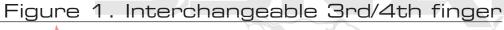



Using a 1/16" hex key, loosen the set screw and remove the pin as shown on left.
 Once the pin is removed, remove the 3-finger attachment.

- Insert the 4th finger attachment, and replace the pin as shown. Tighten down each set screw.
 - * 4th finger attachment has two set screws

Figure 2. Sweeping 4th finger

- Using a 1/16" hex key, loosen/tighten the two set screws to set the desired angle of the 4th finger attachment.
- When the desired angle is reached, make sure each set screw is tight.



